

---

# Sun Fire™ 15K/12K Systems

## Getting Started



### System Overview

**Sun Fire 15K/12K Systems Binder Set**  
• *Sun Fire 15K/12K Systems Overview Manual*



### Installation

**Sun Fire 15K/12K Systems Binder Set**  
• *Sun Fire 15K/12K Systems Site Planning Guide*  
• *Sun Fire 15K/12K Systems Installation and De-Installation Guide*

**Other Installation Documents**  
• *System Management Services (SMS) 1.2 Administrator Guide*  
• *Sun Fire 15K/12K Systems Read Me First*  
• *Sun Fire 15K/12K Systems Unpacking Guide*  
• *Sun Fire 15K/12K Systems Task Map* (see Task Map on reverse side)



### Administration

**Sun Fire 15K/12K Systems**

**Other Administration Documents**  
• *System Management Services (SMS) 1.2 Administrator Guide*



### Hardware Repair

**Sun Fire 15K/12K Systems Binder Set**  
• *Sun Fire 15K/12K Systems Service Manual*

**Other Documents**  
• *Sun Fire 15K/12K Systems Service Reference I—Nomenclature*  
• *Sun Fire 15K/12K Systems Service Reference II—Component Numbering*  
• *Sun Fire 15K/12K Systems Carrier Plate Configurations*



### Localization Package

**Sun Fire 15K/12K Systems Binder Set**  
French, Korean, Simplified Chinese, and Traditional Chinese

---

# Installation Task Map for the Sun Fire 15K/12K Systems



---

## Step 1

- Verify power, air conditioning, and floor area requirements—Refer to the *Sun Fire 15K/12K Systems Site Planning Guide*



---

## Step 2

- Set up cabinet, connect power cables—Refer to the *Sun Fire 15K/12K Systems Installation and De-Installation Guide*

---

## Step 3

- Power on the Sun Fire 15K/12K Systems—Refer to the *Sun Fire 15K/12K Systems Installation and De-Installation Guide*
- Allow the system to run through POST and ensure there are no errors, then power off the system

---

## Step 4

- Install options and storage devices—Refer to the documentation that came with the option or storage for details

---

## Step 5

- Configure the system—Refer to the *System Management Services (SMS) 1.2 Administrator Guide* and the *Sun Fire 15K/12K Software Overview Guide*

---

## Step 6

- Install Solaris™ Operating Environment on each domain—Refer to the *Solaris (SPARC Platform Edition) Installation Guide*
  - Boot Solaris Operating Environment on each domain—Refer to the *System Management Services (SMS) 1.1 Administrator Guide* and the *Sun Fire 15K/12K Software Overview Guide*
- 

Copyright 2002 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, Sun Fire, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

Copyright 2002 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, Sun Fire, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays.



Sun Microsystems, Inc. • 4150 Network Circle • Santa Clara, CA 95054 USA • 650-960-1300 • Fax 650 969-9131

